

Part Number	Description	Cond
128-384060-2	CONTROL WHEEL	RP
128-550049-2	CLIP	NE
128-810080-2	BUMPER STRIP	NE
130-910031-602	COWL DOOR AFT	NE
140-1701-3	AILERON - WINGLET APPLICATION	RP
202-0002-508	TR DOOR LOWER RH	AR
225-0006-503	UPPER TR DOOR	AR
225-0006-503	UPPER TR DOOR	AR
2422520-25	DOOR LH	RP
25-1BES7AD	LH COWL	NE
25-1BES7AD	LH COWL	NE
25-6ES1-3A	COWL	NE
25-6ES239A	COWL, RH OUTBOARD	NE
25-6ES287AD	COWL	NE
25-6ES288AD	COWL	NE
25-8CT219-139A	MOUNTING ASSY-ELEVATOR TRIM SERVOMOTOR	AR
25-8GF-227-1A	REAR CONE	AR
25-8TE1-2A	ELEVATOR STARBOARD	RP
25-8TF513-1A	STABILIZER ASSY - VERTICAL UPPER	RP
25-8UD43-116A	FAIRING ASSEMBLY	AR
25-8UD505-2A	RH MAIN GEAR DOOR ASSY	AR
25-8UD63-1A	NOSE DOOR ASSY, REAR	AR
25-8WB9-2A	AIRBRAKE ASSY, TOP RH	RP
25-8WF251-2A	FLAP ASSEMBLY, STARBOARD	AR
25-8WF3-169A	FLAP ASSEMBLY	RP
25-8WF3-170A	FLAP ASSEMBLY	RP
25-8WG1-118A	AILERON AND TAB, RH	RP
25-9VF601-1	APU INLET DUCT	NE
25ES1153-109A	COWL	NE
25ES1155-143A	COWL	OH
25ES1155-159A	COWL	NE
25ES633-233A	COWL	NE
25ES633-233A	COWL	NE
25ES633-235A	COWL	NE
25ES639-107A	COWL	NE
25ES641-157A	COWL	NE
25ES643AD	COWLING	NE
25ES644AD	COWLING	NE
25ESZ141-3A	COWL	NE
25ESZ141-5A	COWL	NE

25RF203AJ	RADOME	NE
25TR209AG	RUDDER TAB	RP
45A10718-003	FAIRING	NE
45A10770-002	MAIN LANDING GEAR DOOR	NE
45A16002-031	FLAP ASSY LH	RP
45A16002-031	FLAP ASSY LH	RP
45A16002-032	RH FLAP ASSY	RP
45A16002-032	RH FLAP ASSY	OH
45A16241-002	FLAP, AFT RH	AR
45A16241-002	FLAP, AFT RH	RP
45A16241-002	FLAP, AFT RH	RP
45A22002-001	ELEVATOR	RP
45A22002-001	ELEVATOR	RP
45A22002-002	ELEVATOR	RP
45A22002-002	ELEVATOR	RP
45A22002-002	ELEVATOR	RP
45A22002-002	ELEVATOR	RP
45A22002-002	ELEVATOR	RP
45A22002-641	ELEVATOR, LH	AR
45A22022-003	RIB - E CENTER SECTION	NE
45A22120-004	ANGLE	NE
45A22120-004	ANGLE	NE
45A24001-211	RUDDER AND TAB	RP
45A24001-211	RUDDER AND TAB	IN
45A30203-001	EMERGENCY ESCAPE HATCH	RP
45A30308-024	MLG DOOR	IN
45A30313-008	BEAM	NE
45A30356-005	FRAME	NE
45A30356-006	FRAME	NE
45A35022-001	INLET	AR
45A35022-001	INLET	RP
45A35022-011	L.H. INTAKE	AR
45A35044-003	SKIN	NE
45A35044-004	SKIN	NE
45A35044-006	SKIN	NE
45A35044-007	INNER SKIN-INTAKE DUCT, NACELLE	NE
45A35044-007	INNER SKIN-INTAKE DUCT, NACELLE	NE
45A35056-005	DUCT SPLICE	NE
45A35060-003	SPLICE	NE
45A35202-007	FRAME	NE
45A35203-005	FRAME - NACELLE STA 635.9	NE
45A35203-005	FRAME - NACELLE STA 635.9	NE

45A35212-003	ANGLE	NE
45A35212-004	ANGLE	NE
45A35212-005	ANGLE	NE
45A35212-006	ANGLE	NE
45A35212-007	ANGLE	NE
45A35212-007	ANGLE	NE
45A35212-008	FRAME	NE
45A35221-003	STIFFENER	NE
45A35221-009	STIFFENER	NE
45A35221-013	STIFFENER	NE
45A35221-017	STIFFENER	NE
45A35221-019	STIFFENER	NE
45A35221-023	STIFFENER	NE
45A66192-003	INSULATOR - NACELLE, ANTI-ICE	NE
45A88558-131	MOUNT	NE
45A88558-132	MOUNT	NE
45A96583-025	STIFFENER	NE
45A96583-029	STIFFENER	NE
45A96583-030	STIFFENER	NE
45A96583-031	STIFFENER	NE
45A96583-032	STIFFENER	NE
5451101-81	RH AFTERBODY	AR
C42B40201-4	INLET	IN
C42B40201-4	INLET	IN
C42B40202-3	LH COWL ASSY, AFT	NE
C42B50201-3	LH COWL ASSY	NE
C42B50201-3	LH COWL ASSY	IN
C42B50201-5	LH INLET COWL	NE
C42B50201-5	LH INLET COWL	NE
C42RDB50201-7	L/H INLET COWLING	IN
C42RDB50201-8	ENGINE NACELLE RH	IN
C42RDB50201-8	ENGINE NACELLE RH	IN
C42RDB50201-8	ENGINE NACELLE RH	IN
C46B11000-21	INLET LH	IN
C46B11000-21	INLET LH	RP
C46B11000-22	INLET RH	AR
C46B12000-7	AFT COWL	NE
C46B12000-7	AFT COWL	NE
C46B12000-7	AFT COWL	RP
C46B12000-8	AFT COWL	NE
C46B12000-8	AFT COWL	NE

C46B12000-8	AFT COWL	NE
C46B14000-3	PANEL ASSY-UPPER LH ONLY	AR
C46B14000-3	PANEL ASSY-UPPER LH ONLY	IN
C46B14000-3	PANEL ASSY-UPPER LH ONLY	IN
C46B14000-3	PANEL ASSY-UPPER LH ONLY	RP
C46B14000-3	PANEL ASSY-UPPER LH ONLY	IN
C46B14000-3	PANEL ASSY-UPPER LH ONLY	RP
C46B14000-3	PANEL ASSY-UPPER LH ONLY	IN
C46B14000-3	PANEL ASSY-UPPER LH ONLY	IN
C46B14000-3	PANEL ASSY-UPPER LH ONLY	AR
C46B14000-4	PANEL ASSY-UPPER RH ONLY	AR
C46B14000-4	PANEL ASSY-UPPER RH ONLY	IN
C46B14000-4	PANEL ASSY-UPPER RH ONLY	IN
C46B14000-4	PANEL ASSY-UPPER RH ONLY	IN
C46B14000-4	PANEL ASSY-UPPER RH ONLY	IN
C46B14000-4	PANEL ASSY-UPPER RH ONLY	AR
C46B14100-47	SKIN-UPPER COWL	NE
C46B14100-47	SKIN-UPPER COWL	NE
C46B15000-21	COWL DOOR LH	RP
C46B15000-21	COWL DOOR LH	RP
C46B15000-23	COWL DOOR RH	AR
C46B15000-5	INLET COWL, LH	RP
C46B15000-7	COWL DOOR RH	RP
F10A5B10204-55	PANEL ASSY, UP COWL	NE
F10A5B10204-55	PANEL ASSY, UP COWL	NE
F10A5B10204-57	PANEL ASSY, UP COWL	NE
GM158-1000-954	AILERON	IN
GM175-1711-20	FAIRING	RP
GM175-1821-28	ACCESS PANEL	RP
GM175-1911-52	FAIRING, R/H	RP
GM178-1000-2	WINGLET ASSY	RP
GS2970089-23	BELLY PANEL	IN
GS297-0414-3	FAIRING	RP
GS3280003-1	NOSE GEAR DOOR, LH	RP
NP-161601-2	CENTER WINDSHIELD	NE
NP-161602-3	PILOT WINDSHIELD	NE
S25-7UM50002A	RH GEAR DOOR	OH
S25-7WB50001AB	AIRBRAKE ASSY, LOWER LH	RP
S25-7WB50002AB	AIRBRAKE ASSY, LOWER RH	RP
S25ES643AB	COWL	NE
S25ES644AB	COWL	NE

S25WS3001-11A	LEADING EDGE LH OUTBOAR	NE
S25WS3001-11A	LEADING EDGE LH OUTBOAR	NE
011-00779-10	MODULE-TRANSPONDER, MODE S, GTX 33	AR
0113-9	BLOWER ASSY	AR
100-TA1964-N8A	STAB TRIM INDICATOR	AR
100-TA1964-N8A	STAB TRIM INDICATOR	AR
100-TA1968-N8	FLAP FOLLOW UP	AR
103278-13	VALVE, OUTFLOW	AR
103278-13	VALVE, OUTFLOW	AR
103278-13	VALVE, OUTFLOW	AR
103278-13	VALVE, OUTFLOW	AR
103278-13	VALVE, OUTFLOW	AR
1092TH100-47	AIR VALVE ACTUATOR	AR
128-364122-7	ROLL TRIM PC BOARD	AR
128-364122-7	ROLL TRIM PC BOARD	AR
128-364122-7	ROLL TRIM PC BOARD	AR
1301-1	CURRENT SENSOR	AR
1301-1	CURRENT SENSOR	AR
1301-1	CURRENT SENSOR	AR
1301-1	CURRENT SENSOR	AR
130368-15	CONTROLLER, CABIN PRESSURE	NE
130368-15	CONTROLLER, CABIN PRESSURE	NE
1520T100-9	FLOW VALVE CONTROL	AR
1520T100-9	FLOW VALVE CONTROL	AR
1520T100-9	FLOW VALVE CONTROL	AR
1535-05	MAX ALLOWABLE AIRSPEED	OH
1896-00-1	REG AND SO VALVE	AR
1896-00-1	REG AND SO VALVE	AR
2118756-1	SYNC/APR	AR
2118756-1	SYNC/APR	AR
27441482-13	ENGINE ANTI-ICE VALVE	AR
30-0863-1	LIGHT ASSEMBLY	AR
30230-1174	IVSI	AR
3100922-05	BLEED VALVE	AR
3100922-05	BLEED VALVE	AR
3100923-02	BLEED VALVE	AR
3100923-02	BLEED VALVE	AR
3100923-02	BLEED VALVE	AR
3100923-02	BLEED VALVE	AR
3100923-02	BLEED VALVE	AR
32005-007	TACH GEN	AR
32005-007	TACH GEN	AR

397124-2-4	VALVE, WING ANTI-ICE	IN
397124-2-4	VALVE, WING ANTI-ICE	AR
4013241-901	AIR DATA COMPUTER	AR
4013241-901	AIR DATA COMPUTER	AR
41-305-1	TACH, PROP	IN
41-402-1	INDICATOR, ITT	NR
43-304-1	INDICATOR, TURBINE SPEED	RP
523258	INDICATOR, FAN SPEED	AR
523258	INDICATOR, FAN SPEED	AR
5400505-1	CONTROL VALVE	AR
5630-1	AUDIO PANEL	RP
5C46.32.35K.05.1.A		
L	INDICATOR, AIRSPEED, PILOT	OH
5C46.32.35K.05.1.A		
L	INDICATOR, AIRSPEED, PILOT	OH
60-3157-1	BATTERY POWER SUPPLY	RP
622-5735-001	SERVO MOUNT	AR
622-5735-001	SERVO MOUNT	AR
622-5735-001	SERVO MOUNT	AR
622-5735-001	SERVO MOUNT	AR
622-5735-001	SERVO MOUNT	AR
622-5735-001	SERVO MOUNT	AR
622-5735-002	SERVO MOUNT	OH
7003180-901	FLIGHT COMPUTER	AR
75-134-9	FUEL PROBE	OH
78-8060-6086-5	STORMSCOPE RECEIVER WX-1000E	IN
8210-003-01	GOVERNOR	OH
83-124-1	FUEL FLOW INDICATOR	OH
83-124-1	FUEL FLOW INDICATOR	AR
86000-0177	CLOCK, 8 DAY, 24 HOUR	AR
A210632	OVERSPEED GOVERNOR	OH
A703FSS	CONTACTOR	AR
EM4011-2	TRIM ACTUATOR	AR
EM4018-2	VALVE, SHUTOFF	AR
EM4018-2	VALVE, SHUTOFF	AR
EM4018-2	VALVE, SHUTOFF	AR
EM4018-2	VALVE, SHUTOFF	AR
EM4018-2	VALVE, SHUTOFF	AR
EM601	BLOWER	RP
G7740A-19-24	BEACON, ROTATING	AR
G7740A-19-24	BEACON, ROTATING	AR
MC10-13-02	MASK, CREW OXYGEN	AR

MC10-06-125	MASK, CREW OXYGEN	NE
MC10-06-125	MASK, CREW OXYGEN	NE
MC10-06-125	MASK, CREW OXYGEN	NE
MC10-06-125	MASK, CREW OXYGEN	NE
MC10-06-125	MASK, CREW OXYGEN	NE
MC10-15-166	MASK, CREW OXYGEN	NE
MC10-15-166	MASK, CREW OXYGEN	NE
MC10-15-166	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MC20-019	MASK, CREW OXYGEN	NE
MF10-03-02	MASK, CREW OXYGEN	NE
MF10-03-02	MASK, CREW OXYGEN	NE
MF10-03-02	MASK, CREW OXYGEN	NE
MF10-03-02	MASK, CREW OXYGEN	NE
00033168-1	LIGHT ASSY, RH UPPER	NE
00033168-2	LIGHT ASSY, RH UPPER	NE
00033190-115	LIGHT ASSEMBLY	AR
00033190-116	LIGHT ASSEMBLY	AR
0020BG1	AOA COMPUTER	AR
0020BG1	AOA COMPUTER	AR
0020BG1	AOA COMPUTER	AR
0020BG1	AOA COMPUTER	AR
0020BG1	AOA COMPUTER	AR
0020BG1	AOA COMPUTER	AR
0020BG1	AOA COMPUTER	AR
0020BG1	AOA COMPUTER	AR
010-00296-10	MAGNETOMETER	NE
010-11689-04	PORTABLE DATALINK	NE
01-0790028-09	STROBE LIGHT	AR
01-0790029-04	STROBE LIGHT	AR
01-0790029-04	STROBE LIGHT	AR
011-00779-20	TRANSPONDER WITH EXTENDED SQUITTER GTX 33	RP
011-00779-20	TRANSPONDER WITH EXTENDED SQUITTER GTX 33	RP
011-00894-08	SERVO ACTUATOR (GEAR SIDE) GSM 85	RP
011-00894-08	SERVO ACTUATOR (GEAR SIDE) GSM 85	AR
011-00894-08	SERVO ACTUATOR (GEAR SIDE) GSM 85	RP

011-00894-14	SERVO ACTUATOR (GEAR SIDE) GSM 85	RP
011-01108-00	INTEGRATED FLIGHT DISPLAY GDU 1500	RP
0174126090	OVERSPEED VALVE	AR
0174126090	OVERSPEED VALVE	AR
02000003-3	LIGHT KIT	NE
02000004-3	LIGHT KIT	NE
02000004-7	FOUR LIGHT KIT	NE
02000004-7	FOUR LIGHT KIT	NE
02000004-7	FOUR LIGHT KIT	NE
02000004-7	FOUR LIGHT KIT	NE
02000005-1	FOUR LIGHT KIT	NE
02000005-1	FOUR LIGHT KIT	NE
02000005-1	FOUR LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
02000005-3	FLOOD LIGHT KIT	NE
0204KTU2	FUEL PROBE	IN
020-950-012	FUEL QUANTITY, TANK UNIT	OH
020-950-013	FUEL QUANTITY, TANK UNIT	OH
0219KTU01	FUEL PROBE	RP
065-0014-15	SERVO ACTUATOR	AR
065-0014-15	SERVO ACTUATOR	AR
065-0015-00	SERVO MOUNT	AR
065-0015-00	SERVO MOUNT	AR
065-0015-00	SERVO MOUNT	AR
065-0015-01	SERVO MOUNT KSM 375	OH
065-0015-01	SERVO MOUNT KSM 375	AR
065-0015-01	SERVO MOUNT KSM 375	AR
065-0015-01	SERVO MOUNT KSM 375	AR
065-0015-01	SERVO MOUNT KSM 375	AR
065-0015-01	SERVO MOUNT KSM 375	OH
065-0019-06	AUTOPILOT COMPUTER	AR

065-0044-01	AIR DATA COMPUTER	AR
065-0061-50	TRIM SERVO KS-272A	SV
065-0064-08	FLIGHT COMPUTER KCP220	MD
065-0064-08	FLIGHT COMPUTER KCP220	SV
065-0076-03	SERVO ASSY	AR
065-0076-05	SERVO ASSY	AR
065-0076-05	SERVO ASSY	AR
065-0082-01	AIR DATA COMPUTER	AR
065-0085-02	COMPUTER, AIR DATA KDC-222	AR
065-0085-02	COMPUTER, AIR DATA KDC-222	SV
065-0085-20	COMPUTER, AIR DATA KDC-222	MD
065-0086-08	MODE CONTROLLER	SV
065-5030-04	GYRO ADAPTER	OH
066-01130-0801	VOR COMPRESSOR, CVTR DUAL	IN
066-01130-0801	VOR COMPRESSOR, CVTR DUAL	OH
066-01141-1101	TRANSPONDER	OH
066-01143-1602	XPDR MODE S/TCAS	IN
066-01143-2101	XPDR MODE S/TCAS	RP
066-01143-2101	XPDR MODE S/TCAS	AR
066-01143-2101	XPDR MODE S/TCAS	AR
066-01153-0101	RADAR ALTIMETER KRA-405B	BER
066-04021-1411	SYMBOL GENERATOR	RP
066-1021-01	MARKER BEACON RECEIVER KR-21	OH
066-1055-03	AUDIO CONTROL	AR
066-1062-00	ATC TRANSPONDER KT-76A	RP
066-1062-00	ATC TRANSPONDER KT-76A	RP
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-1069-04	DME INDICATOR	AR
066-3034-24	VOR INDICATOR	IN
066-3038-00	RADIO MAGNETIC INDICATOR KI-229	IN
066-3038-00	RADIO MAGNETIC INDICATOR KI-229	OH
069-1024-09	NAV/COMM TRANSCEIVER	RP
071-00159-0111	WEATHER RADAR MODULE, KAC-501	IN
071-01507-5202	TCAS CONTROL	RP

071-01508-0201	RMI/SLEW COURSE ADAPTOR	IN
071-01508-0202	RMI/SLEW COURSE ADAPTER	AR
071-01511-0101	CONTROL PANEL CP-469A	IN
071-01511-0101	CONTROL PANEL CP-469A	IN
071-01568-0901	TCAS CONTROL	AR
071-1242-06	SLAVING ACCESSORY KA-51B	RP
071-1251-00	RELAY BOX KA-138	OH
071-1274-01	HF CONTROL	IN
08301-1	DE-ICER TANK	AR
0871CT1	ICE DETECTOR	AR
0871CT1	ICE DETECTOR	AR
0871CT1	ICE DETECTOR	AR
0871CT1	ICE DETECTOR	AR
0871CT1	ICE DETECTOR	AR
0871KK2	ICE DETECTOR	AR
0871KK2	ICE DETECTOR	AR
088424001	HYDRAULIC ACCUMULATOR	AR
100-0043-05	PROP RPM INDICATOR	OH
100-340564-3	PC BOARD, RELAYS	RP
100-340564-601	PC BOARD, RELAYS	NE
100-364217-15	PC BOARD, FAULT DETECT	AR
100-364217-15	PC BOARD, FAULT DETECT	RP
100-364217-15	PC BOARD, FAULT DETECT	RP
100-364217-9	PC BOARD, FAULT DETECT	AR
100-364217-9	PC BOARD, FAULT DETECT	AR
100-364217-9	PC BOARD, FAULT DETECT	AR
100-364217-9	PC BOARD, FAULT DETECT	AR
100-384079-3	PROP TACH INDICATOR	AR
100-384079-3	PROP TACH INDICATOR	AR
100-384080-3	TACHOMETER	OH
100-601940-000	INFRARED SENSOR UNIT CMA-2600	AR
100-TA1964-N3B	FLAP POSITION TRANSMITTER, RH	AR
100-TA1965	FLAP POSITION DETECTOR	AR
100-TA1967	STAB TRIM TRANSMITTER	AR
101-341542-9	PCB ASSY, RELAY SWITCHING	AR
101-341542-9	PCB ASSY, RELAY SWITCHING	AR
101-342536-1	PC BOARD COMPONENT	RP
101-342542-605	RELAY BOX	AR
101-364092-15	PC BOARD, TEST	AR
101-364092-21	PC BOARD, TEST	RP
101-364170-11	PC BOARD	AR
101-364170-11	PC BOARD	AR
101-364170-11	PC BOARD	AR

101-364210-17	PC BOARD	RP
101-364246-27	EMERGENCY POWER SUPPLY	AR
101-364275-5	PC BOARD, N1 MONITOR	RP
101-364391-1	PC BOARD, ANNUN CONTROL	AR
10141T02Y00	FUEL PROBE	OH
101435-01211	ALTIMETER, PRESSURE	AR
10143T01Y00	FUEL PROBE	RP
101-500047-13	MOTOR AILERON SERVO	RP
101-500047-15	AILERON CAPSTAN	AR
101-500047-15	AILERON CAPSTAN	RP
101-500047-19	CAPSTAN ELEVATOR	AR
101-500047-19	CAPSTAN ELEVATOR	RP
101-500047-19	CAPSTAN ELEVATOR	AR
101-500047-23	CAPSTAN RUDDER	AR
101-500047-49	CAPSTAN ELEVATOR	RP
101-500055-7	AUTOPILOT COMPUTER	RP
102-0059-01	GYRO HORIZON	AR
10207T01Y00	FUEL PROBE	OH
102464-16-2	CONTROLLER, PRESSURE	AR
102464-26	CONTROLLER, PRESSURE	AR
102464-26	CONTROLLER, PRESSURE	AR
102464-26	CONTROLLER, PRESSURE	AR
102466-1	REGULATOR, AIR PRESS	AR
102466-1	REGULATOR, AIR PRESS	AR
102AU1AP	SENSOR, TOTAL TEMP	IN
102AU1AP	SENSOR, TOTAL TEMP	RP
102ER1EC	SENSOR, TOTAL TEMP	AR
102ER1EC	SENSOR, TOTAL TEMP	AR
102ER1EC	SENSOR, TOTAL TEMP	AR
102ER1EC	SENSOR, TOTAL TEMP	AR
103068-5	VALVE, SAFETY	AR
103278-18	VALVE, OUTFLOW	OH
103278-8	VALVE, OUTFLOW	AR
103456-4	VALVE, SAFETY	AR
103456-4	VALVE, SAFETY	AR
103456-8	VALVE, SAFETY	AR
103460-18	VALVE, SAFETY	AR
103460-7	VALVE, SAFETY	AR
103460-7	VALVE, SAFETY	AR
103460-7	VALVE, SAFETY	AR
103570-20	VALVE, OUTFLOW	AR

103648-6	OUTFLOW VALVE	AR
103760-1	VALVE, OUTFLOW	OH
103760-1	VALVE, OUTFLOW	OH
103760-2	VALVE ASSY, SAFETY	RP
103760-2	VALVE ASSY, SAFETY	AR
103760-2	VALVE ASSY, SAFETY	AR
103790-2	PRESSURIZATION VALVE	AR
10450-11139	ALTIMETER, MILLIBAR	AR
1065-00-000	AIRBORNE DATA LINK	AR
10662B	OIL COOLER	OH
106884-3-1	VALVE, FLOW CONTROL	AR
106884-3-1	VALVE, FLOW CONTROL	AR
1084000-4	HYDRAULIC CONTROL UNIT	OH
1084000-4	HYDRAULIC CONTROL UNIT	OH
1084000-4	HYDRAULIC CONTROL UNIT	IN
1110-A-0501-02	SATCOM ROUTER	AR
11218-6	CONTROLLER DE-ICE	AR
114.099-3	INDICATOR, HYD PRESSURE	AR
114.099-3	INDICATOR, HYD PRESSURE	AR
114-364084-15	LIGHT ASSEMBLY	AR
114-364084-15	LIGHT ASSEMBLY	AR
114-380045-3	POWER STEERING ACTUATOR	RP
1150248-1	SENSOR TEMP ANTIICE	IN
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
115-8001-3	BRAKE ASSY	AR
1169-1	HOT AIR TEMP MONITOR	AR
1169-1	HOT AIR TEMP MONITOR	AR
117-340040-1	PC BOARD, RELAYS	RP
117-340041-1	PC BOARD, RELAYS	AR
117-340041-1	PC BOARD, RELAYS	RP

117-340041-1	PC BOARD, RELAYS	RP
117-340041-1	PC BOARD, RELAYS	RP
117-364066-11	FUEL XFER PC BOARD	AR
117-364072-1	PC BOARD, FAULT DET	RP
117BC101-1	BATTERY CHARGER	AR
117BC101-1	BATTERY CHARGER	AR
117BC101-1	BATTERY CHARGER	AR
117BC101-1	BATTERY CHARGER	AR
117BC101-1	BATTERY CHARGER	AR
1200006-005	SELCAL	AR
126462-3	ACTUATOR, PNEU DRIVE	IN
1280504-1	ACTUATOR ASSY	AR
1280504-1	ACTUATOR ASSY	AR
1280504-1	ACTUATOR ASSY	AR
1280504-2	ACTUATOR ASSY	AR
1280504-2	ACTUATOR ASSY	AR
1280504-2	ACTUATOR ASSY	AR
1281033-1	ACCUMULATOR	AR
128-364068-1	PC BOARD, LDG ASSY AFT	RP
128-364084-1	PC BOARD, CBN/EMER LITES	RP
128-364088-1	PC BOARD, EMER BUS FAIL	RP
128-364090-5	PC BOARD, ICE PROT LH	OH
128-364090-5	PC BOARD, ICE PROT LH	OH
128-364090-5	PC BOARD, ICE PROT LH	OH
128-364090-5	PC BOARD, ICE PROT LH	OH
128-364096-1	PC BOARD, ENG FIRE EXT/DET	NE
128-364100-5	FUEL XFER PC BOARD	RP
128-364102-5	FUEL XFER PC BOARD	AR
128-364102-7	PC BOARD ASSEMBLY	NE
128-364106-1	PC BOARD, PWR PLANT CONTROL	AR
128-364106-5	PC BOARD	RP
128-364108-1	PC BOARD, ENG STR AND IGN LH	AR
128-364108-5	PC BOARD	AR
128-364108-7	PC BOARD	AR
128-364110-5	PC BOARD, ENGINE START IGN	AR
128-364110-5	PC BOARD, ENGINE START IGN	AR
128-364110-5	PC BOARD, ENGINE START IGN	AR
128-364110-5	PC BOARD, ENGINE START IGN	AR
128-364110-5	PC BOARD, ENGINE START IGN	AR
128-364116-5	PCB	AR
128-364124-1	PC BOARD, PITCH TRIM	AR

128-364255-31	OAT BIAS BOX	AR
128-810032-15	TORQUE LINK	NE
128-810034-10	STRUT ASSY-SHOCK, MLG RH	AR
128-810034-9	STRUT ASSY-SHOCK, MLG LH	AR
128-810039-3	PLUNGER TUBE	NE
128-810080-3	SHIM	NE
128-810081-2	SIDE STRUT MLG	AR
129-384025-1	ANNUNCIATOR BOX ASSY	AR
130156-1	CHECK VALVE	AR
13027-6	VALVE	AR
13027-6	VALVE	AR
130-340097-1	PC BOARD ASSY, AUDIO	AR
130356-11	CONTROLLER, PRESSURIZATION	AR
130356-5	CONTROLLER, PRESSURIZATION	AR
130356-5	CONTROLLER, PRESSURIZATION	AR
130360-1	CONTROLLER OUTLINE, OUTFLOW VALVE, CABIN	AR
130360-14	CONTROLLER OUTLINE, OUTFLOW VALVE, CABIN	AR
130360-14	CONTROLLER OUTLINE, OUTFLOW VALVE, CABIN	AR
130360-3	CONTROLLER OUTLINE, OUTFLOW VALVE, CABIN	AR
130360-3	CONTROLLER OUTLINE, OUTFLOW VALVE, CABIN	AR
130360-7	CONTROLLER OUTLINE, OUTFLOW VALVE, CABIN	AR
130360-7	CONTROLLER OUTLINE, OUTFLOW VALVE, CABIN	AR
130374-19	PRESSURE CONTROLLER	AR
130374-22	PRESSURE CONTROLLER	AR
130374-3	PRESSURE CONTROLLER	AR
130374-3	PRESSURE CONTROLLER	AR
130374-3	PRESSURE CONTROLLER	AR
130-380045-9	INDICATOR, OIL TEMP & PRESS	NE
130398-2	CONTROLLER, PRESSURIZATION	OH
130398-2	CONTROLLER, PRESSURIZATION	OH
130398-3	CONTROLLER, PRESSURIZATION	OH
131150-1-1	EJECTOR	AR
131358-3	TANK, AUX VOLUME	AR
131400-4	CONTROL MANUAL VALVE...LINEAR ACTUATOR	AR
132450-0003	ENCODER, ALTITUDE	RP
140-007	TRANSDUCER, ANTI SKID	AR
145-34915-401	MODULE ASSEMBLY	NS
1500-1550-003	OVERHEAD UNIT, DMF	DM
150T283	SENSOR, HYD OVERHEAT	AR
1518-03	MAX ALLOWABLE AIRSPEED	AR
1520T100-111	FLOW PACK	OH

1520T100-111	FLOW PACK	AR
1520T100-111	FLOW PACK	AR
1520T100-111	FLOW PACK	AR
1520T100-12	PNEUMOSTAT	OH
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-12	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	OH
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	AR
1520T100-14	PNEUMOSTAT	OH
1-5295	ACTUATOR ASSY, FLAP, LH	RP
1-5295	ACTUATOR ASSY, FLAP, LH	RP
1-5297	ACTUATOR ASSY, FLAP, OUTBD, LH	RP
1-5297	ACTUATOR ASSY, FLAP, OUTBD, LH	IN
152B204A	TEMP IND	OH
152BL714A	EGT IND	IN
152LC208J	INDICATOR, ITT	AR
153010-000066	STRATUS 3 KIT	NE
1532-12A	DISTRIBUTION VALVE	AR
1532-12A	DISTRIBUTION VALVE	AR
153LA30	DC AMMETER	OH
1568-1-5	AUDIO ELECTRONIC UNIT	AR
159SCC100-17	ACTUATOR, ELEVATOR	OH
16007-161	ALTIMETER	AR
161043-501	ELECTRONIC SEQUENCE UNIT	IN
161043-701	ELECTRONIC SEQUENCE UNIT	AR
161043-701	ELECTRONIC SEQUENCE UNIT	AR

161043-701	ELECTRONIC SEQUENCE UNIT	AR
162B3H	INDICATOR, OIL TEMP	OH
162BL507C	OAT INDICATOR	AR
164540-800A	APU ELEC SEQUENCE UNIT	AR
175050	WATER SEPARATOR	AR
175050	WATER SEPARATOR	AR
1775143	POWER SUPPLY	IN
1826-1	LAMP DIMMER	AR
18293201-1	HYDRAULIC GAUGE	AR
1864-1-5	BATTERY TEMP MONITOR, DUAL C-650	AR
1894-00-1	WING HEAT VALVE	AR
1897-00-1	SOLENOID VALVE	AR
1897-00-1	SOLENOID VALVE	AR
1897-00-1	SOLENOID VALVE	AR
1897-00-1	SOLENOID VALVE	AR
194038-1	HEAT EXCHANGER	AR
1945-12-12	VALVE	AR
1B118-2-D	ELECTRICAL POWER MANAGEMENT PANEL	AR
1C27-5	CARTRIDGE, FUEL PUMP	NE
1C64-2	FUEL BOOST PUMP	NE
1H75-18	REGULATOR & RELIEF VALVE ASSY	AR
1U149-014-12	ADI	OH
1U149-014-12	ADI	OH
2022268-9	OUTBOARD FLAP ACTUATOR	AR
2022278-9	OUTBOARD FLAP ACTUATOR	AR
2033-1-1	RF/IF REMOTE CONTROLLER	IN
203925-4-1	COOLING TURBINE	IN
206-062-721-109	ACTUATOR, LINEAR	AR
206-062-721-109	ACTUATOR, LINEAR	AR
206-062-721-109	ACTUATOR, LINEAR	AR
208-905-001	ITT INDICATOR	AR
208-905-001	ITT INDICATOR	AR
2101402-2	SYNCHRONIZER	AR
2101402-2	SYNCHRONIZER	AR
2101402-2	SYNCHRONIZER	AR
2101402-2	SYNCHRONIZER	AR
2101822-1	SYNCHRONIZER	RP
210528	GOVERNOR	OH
2117416-2	SYNCHRONIZER	AR
2118478-1	ECU	IN
21207-007	LINEAR ACT, HSTB PITCH	AR

228545-5	PRESS REG VALVE	OH
228845	VALVE, SHUTOFF	AR
22A667	TACH GENERATOR	AR
22A731	TACH GENERATOR	AR
22A731	TACH GENERATOR	AR
22A731	TACH GENERATOR	AR
22A731	TACH GENERATOR	AR
22A731	TACH GENERATOR	AR
22A731	TACH GENERATOR	AR
22A731	TACH GENERATOR	AR
23032-018	STARTER GENERATOR	OH
23070-401	MACH AIRSPEED INDICATOR	AR
23070-401	MACH AIRSPEED INDICATOR	AR
2310620-3	NOSE GEAR DOOR, LH	RP
2310620-4	NOSE GEAR DOOR, RH	RP
2313M-186-10	MOTOR - RH WIPER	RP
2327100-4022-1	MAIN ACTUATOR	IN
2340186-2-3	WATER SEPARATOR	AR
23-501-016	GYRO HORIZON, 5000B-10	AR
23989-012	ALTITUDE ALERTER	OH
24030-215	ALERTER	AR
24030-371	MAXIMUM ALLOWABLE AIRSPEED INDICATOR	AR
24660-102	SAT/TAS INDICATOR	AR
24660-502	SAT/TAS INDICATOR	AR
24E26-1	COOLER IDG	OH
24E26-1	COOLER IDG	OH
25122-B25A-2A2	FUEL FLOW INDICATOR	AR
25122-B25A-2A2	FUEL FLOW INDICATOR	AR
2-5295	ACTUATOR ASSY, FLAP, RH	RP
2-5297	ACTUATOR ASSY, FLAP, OUTBD, RH	RP
2587794	FLUX VALVE	AR
2587794	FLUX VALVE	AR
2587794	FLUX VALVE	AR
2587794	FLUX VALVE	AR
2587794	FLUX VALVE	AR
2587794	FLUX VALVE	AR
2587794	FLUX VALVE	AR
25-8KT1-129	PANEL TKS DISTRIBUTOR	AR
25-8NF157-7511A	PANEL WIRE ASSEMBLY	AR
25-8WF251-1A	FLAP ASSEMBLY, PORT	AR
25-8WS1513-68	PANEL-DISTRIBUTER, RH ONLY	RP
25-8WS1613-16A	NAV LIGHT LENS	IN
2593379-1	DUAL REMOTE COMPENSATOR	AR

2594732-600	COMPARATOR MONITOR	AR
25-9NF2323-5A	PC BOARD, TLPU ASSY	AR
25-9NF2323-5A	PC BOARD, TLPU ASSY	AR
25UM357AC	AXLE MLG	OH
25UM358AF	AXLE RH MLG	OH
25UN3AG	DRAG STAY	OH
26012423-105	DC BLOWER	AR
26012423-105	DC BLOWER	AR
27000-01-05	AIR DATA UNIT	AR
27005-00-12	AIR DATA UNIT	AR
270-0930-010	YAW RATE SENSOR	AR
270-0930-010	YAW RATE SENSOR	AR
270-0930-010	YAW RATE SENSOR	AR
270-0930-010	YAW RATE SENSOR	AR
270-0930-010	YAW RATE SENSOR	AR
27241287	VALVE, BLEED AIR	AR
27441500	VALVE, RAM AIR	OH
276AS5	STANDBY AIRSPEED INDICATOR	OH
2-7792-1	VALVE PACK HYDRAULIC	AR
2-7792-1	VALVE PACK HYDRAULIC	AR
28007-017	ENCODING ALTIMETER	AR
30-0027-7	DOME LIGHT	AR
30-0027-7	DOME LIGHT	AR
3001-J14	CABIN ALTITUDE/ PRESSURE DIFF.	AR
3009-12-31	TAWS CLASS B	AR
30-1136-5	STROBE LIGHT	AR
30-1136-5	STROBE LIGHT	AR
30-146	BRAKE ASSEMBLY	AR
30-146	BRAKE ASSEMBLY	AR
30-146	BRAKE ASSEMBLY	AR
30400018	FIRE EXTINGUISHER	AR
30400018	FIRE EXTINGUISHER	AR
30400018	FIRE EXTINGUISHER	AR
30500038	DVD PLAYER	AR
305018-00	SWITCHING UNIT	AR
30510-135	SAT/TAS SDCM	AR
3070800-35	FUEL CONTROL UNIT	NR
3070850-59	FUEL PUMP	AR
3071101-16	FUEL MANIFOLD	OH
3071101-16	FUEL MANIFOLD	OH
30B364-3	PROP TACH IND	OH

30B37-49BT	STARTER - GENERATOR	OH
3100923-01	BLEED VALVE, LOW PRESSURE	AR
3137LB21C	RADIO MAGNETIC INDICATOR	AR
3137LB21C	RADIO MAGNETIC INDICATOR	AR
3202062-1-1	CHECK VALVE	RP
3202062-1-1	CHECK VALVE	AR
3213876-2	VALVE, PRESS REG AND SHUTOFF	AR
3213876-2	VALVE, PRESS REG AND SHUTOFF	AR
3213876-2	VALVE, PRESS REG AND SHUTOFF	AR
3213876-9	VALVE, PRESS REG AND SHUTOFF	AR
3213876-9	VALVE, PRESS REG AND SHUTOFF	AR
3213876-9	VALVE, PRESS REG AND SHUTOFF	AR
3213982-1	VALVE	AR
3213982-1	VALVE	AR
3214102-1	VALVE	IN
3214102-1	VALVE	AR
321776-1-1	BYPASS VALVE	AR
321776-1-1	BYPASS VALVE	AR
321776-1-1	BYPASS VALVE	AR
3244724-9	FUEL CONTROL UNIT	AR
3244755-23	FUEL CONTROL UNIT	AR
3244759-3	FUEL CONTROL UNIT	AR
3244759-3	FUEL CONTROL UNIT	AR
3244759-4	FUEL CONTROL UNIT	AR
3244759-4	FUEL CONTROL UNIT	AR
3244763-2	FUEL CONTROL UNIT	AR
32700007	FIRE EXTINGUISHER	OH
32870-1	ANTI-ICE VALVE	AR
32870-1	ANTI-ICE VALVE	AR
3289674-1	VALVE, COOLING TURBINE BYPASS	AR
3290054-1	VALVE, OUTLET BUTTERFLY	AR
3290112-2-1	MODULATING & SHUTOFF VALVE	RP
3290802-1	COCKPIT TEMP CONTROL VALVE	AR
3290802-1	COCKPIT TEMP CONTROL VALVE	NS
3290802-1	COCKPIT TEMP CONTROL VALVE	AR
3290802-1	COCKPIT TEMP CONTROL VALVE	AR
3290802-1	COCKPIT TEMP CONTROL VALVE	AR
3300-J51	INDICATOR, CABIN ALT/DIFF PRESSURE	OH
33-073-1	ACCUMULATOR	AR
33-073-1	ACCUMULATOR	AR
3-310-5	GYRO SUCTION INDICATOR	AR

33200002-1	FIRE EXTINGUISHER WITHOUT SQUIBBS	AR
33508-00-01	SECONDARY FLIGHT DISPLAY	AR
34988-2	ACTUATOR,ROTARY	AR
35008-32	CONTROL, CFD	AR
35008-32	CONTROL, CFD	RP
35008-32	CONTROL, CFD	AR
3505188-7-1	AIR TURBINE ENGINE STARTER	AR
3571281-8104	TACHOMETER - TURBINE	AR
358-1510V	MASK, OXYGEN	IN
3601-52	LIFT COMPUTER	AR
3601-52	LIFT COMPUTER	AR
3601-8	COMPUTER, STALL	AR
3601-8	COMPUTER, STALL	AR
3601-8	COMPUTER, STALL	AR
3601-8	COMPUTER, STALL	AR
3601-8	COMPUTER, STALL	AR
3601-8	COMPUTER, STALL	AR
3601-8	COMPUTER, STALL	AR
37277-6139	AIRSPEED INDICATOR	AR
37277-6139	AIRSPEED INDICATOR	AR
37277-6139	AIRSPEED INDICATOR	AR
37277-6139	AIRSPEED INDICATOR	AR
37277-6139	AIRSPEED INDICATOR	AR
37277-6139	AIRSPEED INDICATOR	AR
3882600-8-1	FUEL CONTROL, APU	OH
38B93-4-B	CONVERTER	AR
390-381008-0001	LIFT DUMP ACTUATOR	AR
390-381402-0019	FLAP ACTUATOR, LONG, LH	AR
390-812401-0007	AXLE MLG	NE
390-820005-0007	FORK, NOSE	NE
390-820013-0005	DRAG BRACE, UPPER	NE
390-820016-0001	PISTON ASSY, NLG	NE
390-820115-0013	CYLINDER, OUTER	NE
392724-5-1	PRESSURE REGULATOR VALVE	RP
392734-1-5	START VALVE	RP
393004-01970	FUEL QUANTITY INDICATOR	AR
397-02844	INDICATOR, DUAL	AR
397124-2-2	VALVE, WING ANTI ICE	AR
397124-2-2	VALVE, WING ANTI ICE	AR
39800-122	N1 INDICATOR	OH
39800-122	N1 INDICATOR	AR
39800-122	N1 INDICATOR	AR
39800-122	N1 INDICATOR	OH

400-0125-2000	FLITEFONE,R/T	OH
40-0100-27	BEACON	AR
40-0100-3	BEACON	AR
40-0100-3	BEACON	AR
40-0100-3	BEACON	AR
40-0100-3C	BEACON	AR
40-0103-31	BEACON	AR
40-0127-1	BEACON	AR
40-0127-1C	BEACON	AR
40-0127-1C	BEACON	AR
40-0127-1C	BEACON	AR
40-0127-1C	BEACON	AR
4001808-901	GYRO, VERTICAL	AR
4001808-901	GYRO, VERTICAL	AR
4001808-901	GYRO, VERTICAL	AR
4001808-901	GYRO, VERTICAL	AR
40020-01	PUMP, HYD	AR
40020-01	PUMP, HYD	AR
40020-01	PUMP, HYD	AR
40053-03	PUMP, HYDRAULIC	AR
40053-03	PUMP, HYDRAULIC	AR
40053-03	PUMP, HYDRAULIC	NR
40053-03	PUMP, HYDRAULIC	AR
4005842	SERVO BRACKET	AR
4005842	SERVO BRACKET	AR
4005842	SERVO BRACKET	AR
4005842	SERVO BRACKET	AR
4005842	SERVO BRACKET	AR
4006719-704	SERVO	AR
4006719-704	SERVO	AR
4006719-914	SERVO DRIVE	AR
4006719-914	SERVO DRIVE	AR
4006719-914	SERVO DRIVE	AR
40070-01	HYDRAULIC MOTOR	NE
40070-01	HYDRAULIC MOTOR	OH
40070-01	HYDRAULIC MOTOR	NE
40070-01	HYDRAULIC MOTOR	NE
4008519-920	AUTOPILOT COMPUTER	AR
4008519-920	AUTOPILOT COMPUTER	AR
4008519-920	AUTOPILOT COMPUTER	AR
40099-04	HYDRAULIC MOTOR	NE

40099-04	HYDRAULIC MOTOR	NE
40099-04	HYDRAULIC MOTOR	NE
40099-04	HYDRAULIC MOTOR	NE
400SG112Q	STARTER GENERATOR	OH
4013242-709	AIR DATA COMPUTER	OH
4013242-727	AIR DATA COMPUTER	AR
4013242-727	AIR DATA COMPUTER	AR
4013BM42	TACH IND	AR
4015373-701	SERVO DRIVE	AR
4015373-701	SERVO DRIVE	AR
4015374-905	SERVO MOUNT	AR
40157	ACMP	NE
40176-01	TRIM MOTOR	RP
40176-01	TRIM MOTOR	RP
4018366-902	MACH AIRSPEED INDICATOR	AR
4018369-905	FLIGHT DIRECTOR COMPUTER	AR
4018369-905	FLIGHT DIRECTOR COMPUTER	AR
4018369-907	FLIGHT DIRECTOR COMPUTER	AR
4029377-910	AUTOPILOT COMPUTER	RP
4031609-903	TAS/TEMP INDICATOR	AR
405014A	HI-POWERED AMP	AR
405035A	SDU	AR
405038A	HSU	AR
40600-6	MAIN GEAR ACTUATOR	AR
40600-6	MAIN GEAR ACTUATOR	AR
40-672	SPRING	NE
41-201-1	TORQUE INDICATOR	OH
41-303-2	PROP TACH	AR
41-308-1	INDICATOR, PROP TACH	AR
41-403-1	INDICATOR, ITT	AR
41-403-1	INDICATOR, ITT	AR
41-403-1	INDICATOR, ITT	AR
418-079-003	N2 INDICATOR	AR
418-107-104	FUEL FLOW INDICATOR	AR
42040-02	MOTOR PUMP	NE
42043-01	MOTOR DRIVEN HYD PUMP	AR
42044	HYD PUMP	NE
42044	HYD PUMP	NE
42044	HYD PUMP	NE
42044	HYD PUMP	NE
42044	HYD PUMP	NE

42116-04	HYDRAULIC PUMP, AC MOTOR	AR
43-201-1	INDICATOR, TORQUE	RP
43-201-1	INDICATOR, TORQUE	AR
43-201-1	INDICATOR, TORQUE	RP
43-202-1	INDICATOR, TORQUE PRESSURE	AR
43-202-1	INDICATOR, TORQUE PRESSURE	RP
43-307-1	INDICATOR, TACH	AR
43-307-1	INDICATOR, TACH	AR
43-307-1	INDICATOR, TACH	AR
43-324-1	TURBINE SPEED	AR
43663	IGNITION EXCITER	RP
43663	IGNITION EXCITER	RP
438	AUDIO AMP	RP
4401-5	SHUTOFF VALVE	OH
4401-5	SHUTOFF VALVE	OH
44660-0108	GYRO HORIZON	AR
45-226	ADJUSTER	NE
457-370	FUEL CAP	AR
457-370	FUEL CAP	AR
457-526	FUEL CAP	NE
45A10503-1	SPOILER LH OUTBOARD	IN
45A10503-11	SPOILER LH	IN
45A10503-12	SPOILER RH	IN
45A10503-2	SPOILER RH OUTBOARD	IN
45A10718-004	FAIRING	NE
45A16077-007	RIB	NE
45A16077-007	RIB	NE
45A16303-115	SKIN	NE
45A16303-115	SKIN	NE
45A16303-119	LOWER O/B SKIN	NE
45A16303-119	LOWER O/B SKIN	NE
45A22007-003	SPAR - ELEVATOR, AFT	NE
45A22023-003	RIB	NE
45A22024-005	RIB	NE
45A22024-005	RIB	NE
45A22025-003	RIB	NE
45A22026-003	RIB	NE
45A22027-003	RIB	NE
45A22030-003	RIB	NE
45A22030-003	RIB	NE
45A22042-003	RIB	NE

45A22043-005	RIB	NE
45A22043-005	RIB	NE
45A22044-007	RIB	NE
45A22045-007	RIB	NE
45A22046-003	RIB	NE
45A22046-003	RIB	NE
45A22047-003	RIB	NE
45A22047-003	RIB	NE
45A22048-005	RIB	NE
45A22049-005	RIB	NE
45A22050-005	RIB	NE
45A22050-005	RIB	NE
45A22051-003	MID SPAR	NE
45A22052-003	MID SPAR	NS
45A22053-003	MID SPAR	NE
45A22055-003	MID SPAR	NE
45A22059-003	RIB	NE
45A22059-003	RIB	NE
45A22083-005	ROOT RIB	NE
45A22088-009	SPAR, ELEVATOR FRONT	NE
45A22120-003	ANGLE	NE
45A30322-006	RIB	NE
45A30374-006	RIB	NE
45A30374-006	RIB	NE
45A35022-002	INLET	AR
45A35022-002	INLET	RP
45A35022-002	INLET	AR
45A35022-002	INLET	AR
45A35022-002	INLET	AR
45A35022-601	INLET LH	AR
45A35022-601	INLET LH	NR
45A35022-601	INLET LH	AR
45A35022-602	INLET RH	AR
45A35043-024	SKIN ASSEMBLY - NACELLE	NE
45A35043-026	SKIN	NE
45A35057-013	SPLICE	NE
45A35060-005	SPLICE	NE
45A35221-007	STIFFENER	NE
45A40308-007	FITTING-T1 ENGINE ACCY	NE
45A40309-007	BARREL FITTING	NE
45A62804-12	MLG CYLINDER	AR

45A62804-12	MLG CYLINDER	AR
45A62805	NLG ACTUATOR	AR
45A62805	NLG ACTUATOR	AR
45A65507-11	VALVE PACKAGE- SOL. OPE. HYDRAULIC	AR
45A65511-32	CYLINDER, MASTER BRAKE	OH
45AS38515-003	CYLINDER	NE
45AS38516-003	MLG DOOR CYLINDER	AR
45AS39101-007	NOSE GEAR ASSEMBLY	OH
45AS39504-007	CYLINDER	RP
45AS65021-007	HYDRAULIC PACKAGE, POWER BRAKE	OH
45AS65022-007	HYD PACKAGE	AR
46115-41	LOWER STRUT ASSY, MLG	NE
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-23	ENGINE BLEED AIR VALVE	AR
4706-24	ENGINE BLEED AIR VALVE	AR
4706-24	ENGINE BLEED AIR VALVE	AR
4706-24	ENGINE BLEED AIR VALVE	AR
4706-24	ENGINE BLEED AIR VALVE	AR
4712-5	VALVE	OH
50000-2	ACTUATOR	AR
50000-2	ACTUATOR	AR
50000-2	ACTUATOR	AR
50000-2	ACTUATOR	AR
5004175-5	MAIN WHEEL	NE
5004175-5	MAIN WHEEL	IN
5004175-5	MAIN WHEEL	IN
5004175-5	MAIN WHEEL	NE
5004190-6	BRAKE ASSY	AR
5004190-6	BRAKE ASSY	AR
5004190-6	BRAKE ASSY	AR

501-1211-01	NWS COMPUTER	AR
501-1741-2103	STANDBY ATTITUDE INDICATOR	AR
501-1741-2103	STANDBY ATTITUDE INDICATOR	AR
50-380024	TURN AND BANK	AR
504-0010-909	ATTITUDE GYRO	AR
504-0010-910	GYRO	AR
504-0017-916	ATT INDICATOR	AR
504-0042-901	ATTITUDE HORIZON	OH
50-810037-615	DRAG BRACE	OH
50-810037-616	DRAG BRACE	OH
51010-1113	CABIN PRESSURE INDICATOR	BER
51104	HYD PUMP	OH
51104	HYD PUMP	IN
515-3	TACHOMETER - TURBINE	AR
515-3	TACHOMETER - TURBINE	AR
515-3	TACHOMETER - TURBINE	AR
515-3	TACHOMETER - TURBINE	AR
51539-006D-MODB	GENERATOR CONTROL UNIT	AR
51539-006D-MODB	GENERATOR CONTROL UNIT	AR
51539-006D-MODB	GENERATOR CONTROL UNIT	AR
51539-006D-MODB	GENERATOR CONTROL UNIT	AR
51539-006N	GENERATOR CONTROL UNIT	AR
51539-006N	GENERATOR CONTROL UNIT	AR
51539-009H	GENERATOR CONTROL UNIT	AR
51539-009H	GENERATOR CONTROL UNIT	AR
51539-009H	GENERATOR CONTROL UNIT	AR
51539-009H	GENERATOR CONTROL UNIT	AR
5185-00-3	FLOW CONTROL VALVE	AR
5185-00-3	FLOW CONTROL VALVE	AR
5187-00-1	VALVE	NR
520-7	TACHOMETER, TURBINE SPEED	AR
521372	OIL&TEMP PRESSURE IND.	AR
521594	OIL TEMP & PRESS INDICATOR	AR
522-2867-000	SPEAKER AMP	AR
522686	INDICATOR, ITT	RP
523259	INDICATOR, TURBINE SPEED	AR
523259	INDICATOR, TURBINE SPEED	AR

523259	INDICATOR, TURBINE SPEED	OH
523259	INDICATOR, TURBINE SPEED	OH
523477	INDICATOR, HYD PRESS	AR
523477	INDICATOR, HYD PRESS	AR
52631-3	DOOR ROD, NOSE LANDING GEAR	IN
540158-4-2	ACTUATOR	AR
540290-1	ACTUATOR MOTOR	AR
540290-1	ACTUATOR MOTOR	AR
540290-1	ACTUATOR MOTOR	AR
5427-350-91-03	INDICATOR - OIL TEMP AND PRESSURE	RP
5427-350-91-03	INDICATOR - OIL TEMP AND PRESSURE	AR
5428-703-91-03	NG INDICATOR	AR
5428-704-91-03	PROP INDICATOR	AR
5453305-3	RETARD ASSY-THROTTLE	AR
5453511-11	FAN FLAP ACTUATOR	AR
5453511-11	FAN FLAP ACTUATOR	AR
55002-004	INDICATOR, PROP TACH	AR
55002-004	INDICATOR, PROP TACH	AR
55003-004	INDICATOR, TACH	AR
550-1-21735	PUMP DEICE	IN
550-1-21736	PUMP DEICE	OH
55035-0103-23	CABIN DIFF PRESS IND	AR
55110-02	PUMP	OH
5609-03	TACHOMETER - TURBINE	AR
562-287	DC VOLT LOAD	AR
563-046	INDICATOR, OIL TEMP/PRESS	AR
563-046	INDICATOR, OIL TEMP/PRESS	AR
563-082	VOLTMETER	AR
563-119	TACHOMETER, ELECTRIC	AR
563-242	INDICATOR	AR
5651-1-53	AUDIO CONTROL PANEL	IN
57083	PUMP, HYD	OH
57099	PUMP, HYD	RP
572375-2	COOLING TURBINE	AR
572375-2	COOLING TURBINE	AR
5934P-A63	ALTIMETER	AR
5C15.42.35K.05.1.B		
F	INDICATOR, AIRSPEED	RP
600-50967-9	LANDING GEAR CONTROL	AR
600-59142-1	AC POWER MONITOR	AR
600-59154-1	AOA TRANSDUCER	AR

600-75136-3	HYD DOOR ACT	AR
600-93000-103	ASSYMETRY BRAKE	AR
600-93000-99	ASSYMETRY BRAKE	NS
601-50912-3	INDICATOR, ITT	RP
60-2694-1	POWER SUPPLY	RP
60-2694-3	POWER SUPPLY	AR
603	TONE GENERATOR	AR
60-4573-1	POWER SUPPLY	AR
607712-7-2	CONTROL BOX, ELECTRONIC, AIRCRAFT AIR TEMP	RP
607712-7-2	CONTROL BOX, ELECTRONIC, AIRCRAFT AIR TEMP	AR
607712-7-2	CONTROL BOX, ELECTRONIC, AIRCRAFT AIR TEMP	RP
61471-110-3	INDICATOR	AR
617MK3	FLAP CONTROL BOX	AR
617MK3	FLAP CONTROL BOX	OH
618-5250-001	SERVO BASE	AR
618-5957-001	CAPSTAN	AR
618-5973-001	CAPSTAN, AUTOPILOT SERVO	AR
618-5973-001	CAPSTAN, AUTOPILOT SERVO	AR
618-5973-003	CAPSTAN, AUTOPILOT	AR
61P64HN2	SOLENOID VALVE	AR
620359	MAGNETIC AZIMUTH DETECTOR	AR
620359	MAGNETIC AZIMUTH DETECTOR	AR
620359	MAGNETIC AZIMUTH DETECTOR	AR
620359	MAGNETIC AZIMUTH DETECTOR	AR
620359	MAGNETIC AZIMUTH DETECTOR	AR
620359	MAGNETIC AZIMUTH DETECTOR	AR
622-0555-007	RADIO MAGNETIC INDICATOR	RP
622-0555-007	RADIO MAGNETIC INDICATOR	RP
622-0876-001	NAV RECEIVER	RP
622-0876-001	NAV RECEIVER	RP
622-0876-001	NAV RECEIVER	RP
622-0876-001	NAV RECEIVER	RP
622-0876-001	NAV RECEIVER	IN
622-0876-001	NAV RECEIVER	IN
622-0876-001	NAV RECEIVER	IN
622-0876-001	NAV RECEIVER	RP
622-0876-001	NAV RECEIVER	IN
622-0876-001	NAV RECEIVER	RP
622-0876-001	NAV RECEIVER	IN
622-0876-201	NAV RECEIVER	RP
622-0876-201	NAV RECEIVER	RP

622-1036-001	A/P PROGRAMMER	OH
622-1036-001	A/P PROGRAMMER	AR
622-1036-001	A/P PROGRAMMER	AR
622-1879-001	VHF COMM TRANSCEIVER	IN
622-1879-001	VHF COMM TRANSCEIVER	IN
622-1879-002	VHF COMM TRANSCEIVER	RP
622-1879-002	VHF COMM TRANSCEIVER	AR
622-1879-002	VHF COMM TRANSCEIVER	AR
622-2265-044	PANEL, FLIGHT GUIDANCE	AR
622-2506-002	RADIO MAGNETIC INDICATOR	RP
622-2506-006	RADIO MAGNETIC INDICATOR	RP
622-2506-008	RADIO MAGNETIC INDICATOR	RP
622-2506-008	RADIO MAGNETIC INDICATOR	RP
622-2506-014	RADIO MAGNETIC INDICATOR	RP
622-2733-003	PRIMARY SERVO	AR
622-3109-011	AUTOPILOT CONTROL PANEL	AR
622-4964-001	AUTOPILOT COMPUTER	AR
622-4964-001	AUTOPILOT COMPUTER	AR
622-5108-001	DISPLAY CONTROL PANEL	AR
622-5272-020	HF TRANSCEIVER	RP
622-5465-214	AIR DATA COMPUTER	AR
622-5735-004	SERVO MOUNT	AR
622-5798-022	FLIGHT CONTROL PANEL	AR
622-5798-022	FLIGHT CONTROL PANEL	AR
622-6152-001	VHF COMM	RP
622-6152-001	VHF COMM	AR
622-6152-001	VHF COMM	NR
622-6152-001	VHF COMM	AR
622-6152-001	VHF COMM	AR
622-6152-002	VHF COMM	RP
622-6152-031	VHF COMM	IN
622-6209-306	MODE SELECT PANEL	AR
622-6521-015	CONTROL, NAV	RP
622-6521-015	CONTROL, NAV	IN
622-6523-008	TRANSPONDER CONTROL	RP
622-6523-206	TRANSPONDER CONTROL	IN
622-6523-207	TRANSPONDER CONTROL	RP
622-6523-207	TRANSPONDER CONTROL	RP
622-6523-208	TRANSPONDER CONTROL	RP
622-6523-208	TRANSPONDER CONTROL	RP
622-6535-022	ELECTRONIC FLT DISPLAY	AR

622-6590-001	ADAPTER, ADF/TDR CONTROL	IN
622-6590-002	CONTROL ADAPTER	AR
622-7154-001	FAN MONITOR UNIT	AR
622-7154-001	FAN MONITOR UNIT	AR
622-7689-005	VERT SPEED	AR
622-7690-003	VERTICAL NAVIGATION INDICATOR	AR
622-8393-011	WEATHER RADAR PANEL	RP
622-8679-012	MULTIPROCESSOR UNIT	RP
622-8680-001	DISPLAY CONTROL PANEL	RP
63187	GENERATOR	OH
63540-255-1	BEARING DISTANCE INDICATOR	AR
64560-2	VALVE, PARKING BRAKE	AR
64710-4	FLUTTER DAMPNER	AR
64710-4	FLUTTER DAMPNER	AR
6501-1046	TACHOMETER	AR
6501-3070	PROP TACH INDICATOR	OH
65018-005	RAM AIR TEMP INDICATOR	AR
65132-01	PUMP, HYDRAULIC	AR
65132-01	PUMP, HYDRAULIC	AR
651-5867-9	PANEL ASSEMBLY - APU CONTROL	AR
65480-2	FLUTTER DAMPNER	AR
65480-2	FLUTTER DAMPNER	AR
656520	TRANSMITTER, INDUCTION COMPASS	OH
65A181	SEE 65A238	AR
65WE01030-3	HYDRAULIC PUMP	AR
6600264-003	MLG ACTUATOR	AR
66007-01	PUMP, HYD	RP
66020	VALVE, ENGINE ANTI-ICE	AR
6810-1 MOD A	N1 COMPUTER	NE
6810-1 MOD A	N1 COMPUTER	NE
6810-1 MOD A	N1 COMPUTER	NE
6810-1 MOD A	N1 COMPUTER	NE
690119-7	INDICATOR	RP
692545-1	SOLENOID VALVE	AR
696-1-13	INDICATOR, BRAKE PRESSURE	IN
70002-1137	TURN AND SLIP IND, 28VDC	AR
7000466-903	ADI	AR
7000466-903	ADI	AR
7000466-903	ADI	AR
7000700-637	AIRDATA COMPUTER	AR
7000700-637	AIRDATA COMPUTER	AR

7000700-668	AIR DATA COMPUTER RVSM	AR
7000700-668	AIR DATA COMPUTER RVSM	AR
7000700-668	AIR DATA COMPUTER RVSM	AR
7000700-946	AIR DATA COMPUTER	AR
7000700-968	AIR DATA COMPUTER	AR
7000C.83H	VERTICAL SPEED INDICATOR	AR
7002260-733	SERVO DRIVE	IN
7002260-921	SERVO DRIVE	AR
7002260-921	SERVO DRIVE	AR
7002260-922	SERVO DRIVE	AR
7002260-931	SERVO DRIVE	AR
7002260-933	SERVO DRIVE	BER
7002260-933	SERVO DRIVE	BER
70-0274-3	ALARM LIGHT CONTROLLER	AR
70-0274-3	ALARM LIGHT CONTROLLER	AR
7002800-801	LINEAR ACTUATOR	AR
7003360-943	AHRU, STRAPDOWN	AR
7003360-943	AHRU, STRAPDOWN	NR
7003360-943	AHRU, STRAPDOWN	AR
7003400-911	SYMBOL GENERATOR	AR
7003400-911	SYMBOL GENERATOR	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004545-901	AHRS CONTROL	AR
7004609-925	PERFORMANCE COMPUTER	AR
7005383-911	TRIM SERVO	AR
7005819-707	EFIS CONTROL	AR
700750-1415	PRINTER	AR
7007540-946	CONTROLLER	AR
7008471-803	RADAR CONTROLLER	AR
7008471-803	RADAR CONTROLLER	AR
7008471-803	RADAR CONTROLLER	AR
7011673-661	MFG SYMBOL GENERATOR	AR
7011674-119	SYMBOL GENERATOR	NR
7011674-119	SYMBOL GENERATOR	AR

7011822-903	LIGHTNING SENSOR FOR LSZ-850	RP
7011822-903	LIGHTNING SENSOR FOR LSZ-850	AR
7011822-903	LIGHTNING SENSOR FOR LSZ-850	RP
7012738-906	CONTROLLER, LIGHTNING SENSOR	RP
7014600-913	TRIM MOTOR	AR
7014600-913	TRIM MOTOR	IN
7014600-913	TRIM MOTOR	IN
7014600-913	TRIM MOTOR	IN
7014600-913	TRIM MOTOR	IN
7014600-913	TRIM MOTOR	IN
7014600-913	TRIM MOTOR	IN
7014600-913	TRIM MOTOR	IN
7014600-913	TRIM MOTOR	AR
7026532-1902	MAU DATABASE MODULE	IN
7029308-1901	MODULE, AIR MANAGEMENT	NE
7029782-1920	MAU CABINET	AR
7185-7	ACTUATOR, LINEAR	AR
7185-7	ACTUATOR, LINEAR	AR
7185-7	ACTUATOR, LINEAR	AR
7185-7	ACTUATOR, LINEAR	AR
7185-7	ACTUATOR, LINEAR	AR
7185-7	ACTUATOR, LINEAR	AR
718-7	AWI QTY INDICATOR	OH
720846B	GENERATOR CONTROL UNIT	AR
720846B	GENERATOR CONTROL UNIT	AR
720846C	GENERATOR CONTROL UNIT	AR
720846D	GENERATOR CONTROL UNIT	AR
724866-804WH	MAGNASTAR HANDSET	RP
724866-808BK	MAGNASTAR HANDSET AND BASE	RP
724868-802	ARTU MOUNTING TRAY	IN
728318B	GENERATOR CONTROL UNIT	AR
747751-4	TEMP CONTROL	AR
7510700-806	INTEGRATED COMM	AR
7513000-802	CLEARANCE DELIVERY	AR
7517900-10012	COMPUTER, TCAS2000, 6MCU	MD
7517900-10012	COMPUTER, TCAS2000, 6MCU	IN
76-102-10	FUEL PROBE	AR
76-102-10	FUEL PROBE	AR
76-102-10	FUEL PROBE	AR
76-175-3	FUEL PROBE	OH
76481-1	TR CONTROL UNIT	AR

772-5006-009	INDICATOR, FLIGHT DIRECTOR	OH
772-5374-001	PRIMARY SERVO	AR
777-1493-006	ADF CONTROL	AR
777-1980-001	MODE SELECTOR	AR
780933-3-012	ENGINE ELECTRONIC CONTROL	AR
78150	FLAP ACTUATOR SERVOVALVE	AR
782490-50	PROP CONTROL UNIT	NR
787-6366-014	ADF CONTROL UNIT	AR
78-8060-5900-9	STORMSCOPE INDICATOR	AR
78-8060-5941-2	STORMSCOPE RECEIVER	AR
7897340001	LDG ACTUATOR ASSY, 10 YEAR	NR
795-3	LIFT TRANSDUCER	AR
795-3	LIFT TRANSDUCER	AR
799-13	DETECTOR, STALL WARNING	RP
799-13	DETECTOR, STALL WARNING	AR
799-13	DETECTOR, STALL WARNING	AR
799-13	DETECTOR, STALL WARNING	OH
80037-105V	COFFEE POT	AR
80037-110	COFFEE MAKER W/O SPIGOT	AR
80037-110	COFFEE MAKER W/O SPIGOT	AR
8063-007	FUEL CONTROL UNIT	RP
811B	DIGITAL CLOCK	AR
811B	DIGITAL CLOCK	AR
811B	DIGITAL CLOCK	AR
811B	DIGITAL CLOCK	AR
82046-5	ADG CONTROL	AR
822-0319-001	WEATHER RADAR ADAPTER	AR
822-0668-262	RADIO TUNING UNIT	RP
822-1111-001	VHF COMM TRANSCEIVER / VHF-21C	RP
8-331-03	SERVO MONITOR	AR
85020-6	WATER SEPARATOR	AR
85020-9	SEPARATOR,WATER	AR
8533839	COOLER	AR
8540088	CONDENSOR ASSEMBLY	AR
8544206	EVAPORATOR	AR
86438-1	PROP SYNC.INDICATOR(28V LIGHTING)	AR
8-822-01-001	LFCU COMPUTER	AR
893524	FIRE EXTINGUISHER, APU	OH
898930-3-1	VALVE, AIR START	AR
8DJ100WBC2	ITT IND	OH
8DJ81BLB4	TACHOMETER INDICATOR	AR

8DJ81BLB4	TACHOMETER INDICATOR	AR
8DJ81BLB4	TACHOMETER INDICATOR	AR
8DJ81BLB4	TACHOMETER INDICATOR	AR
8DJ81WBA4	TACHOMETER INDICATOR	AR
8DJ81WBA4	TACHOMETER INDICATOR	AR
8DJ81WBL4	TACHOMETER INDICATOR	AR
8DJ81WBL4	TACHOMETER INDICATOR	AR
8DJ81WBL4	TACHOMETER INDICATOR	AR
8DJ81WBM4	TACHOMETER INDICATOR	AR
8DJ81WBM4	TACHOMETER INDICATOR	AR
900-700-036-63	REGULATOR & HOSE	AR
900-700-036-63	REGULATOR & HOSE	AR
900-700-036-63	REGULATOR & HOSE	AR
9016-4601	ACCELEROMETER	AR
9022500-10000	LYNX MSS UAT IN/OUT	NE
9022500-10000	LYNX MSS UAT IN/OUT	NE
90-380037-1	FUEL FLOW INDICATOR	AR
90-380037-1	FUEL FLOW INDICATOR	AR
90-380037-1	FUEL FLOW INDICATOR	AR
90-38901-25	ANNUNCIATOR PANEL	AR
90-38901-25	ANNUNCIATOR PANEL	AR
90-38901-25	ANNUNCIATOR PANEL	AR
9053-3021	INSTRUMENT CLUSTER	AR
911010-1	TTD CONTROLLER	AR
913200-301211C2	ETM INTEGRAL PROCESSOR	RP
9230-17005-01	WIFI ASSEMBLY	NE
9-231-15	FUEL FLOW TRANSMITTER	RP
9-231-15	FUEL FLOW TRANSMITTER	RP
9-464-76	FUEL FLOW INDICATOR	AR
9550264	ANTI-SKID VALVE	AR
9550B	TURN & BANK, ALSO SEE 9550BN577	AR
9550BN540	TURN AND SLIP, LIGHTED	OH
9550BN540	TURN AND SLIP, LIGHTED	AR
9550BN577	TURN & BANK LIGHTED	AR
960443-9	SYSTEM 3 RESERVOIR	IN
963502-29A	AIRSPEED INDICATOR	AR
965-0686-001	GROUND PROXIMITY WARNING COMPUTER	AR
965-1186-006	EGPWS MK VI	RP
966990-1	PRESSURE SWITCH	NE
979-0223-001	BIAXIAL ACCELEROMETER, LINEAR	AR

979432-2	VALVE ASSY, BUTTERFLY SHUTOFF	IN
979432-2	VALVE ASSY, BUTTERFLY SHUTOFF	AR
979432-2	VALVE ASSY, BUTTERFLY SHUTOFF	AR
979432-2	VALVE ASSY, BUTTERFLY SHUTOFF	IN
990-1254-075	STEREO/CHIME/PAGE AUDIO SYSTEM	AR
990-2827-001	INTERPHONE AMP	AR
990-2827-001	INTERPHONE AMP	AR
990-2827-001	INTERPHONE AMP	AR
990-4180-007	JETMAP NTSC W2K 400 MHZ MOD1	AR
9912046-5	ANUNNCIATOR PANEL	AR
99-810057-603	ACTUATOR, MLG	AR
A210528	GOVERNOR	OH
A4503M12-1	LANDING GEAR CONTROL	AR
A4503M12-1	LANDING GEAR CONTROL	AR
A4503M12-1	LANDING GEAR CONTROL	AR
A4503M12-1	LANDING GEAR CONTROL	AR
A4503M9-1	CONTROL, LANDING GEAR	AR
A-703C	CONTACTOR	AR
A703FS	CONTACTOR	AR
A848MAS	CONTACTOR, START	AR
AC61516	EM BRAKE VALVE	AR
ACH50	LIMITER	NE
AE0405A00	FAN, LAV/GALLEY EXH	RP
AE0503AA1	GALLEY FAN	AR
AGS3049	BLEEDER SCREW	NE
AI-EQ1	EQUALIZER	AR
AIR45392-0	VALVE	OH
AIR45392-0	VALVE	OH
AIR45406-1	VALVE, GEAR SELECT	OH
AIR45428-5	HYDRAULIC FLOW VALVE	AR
AIR48502/3	ACTUATOR	AR
AI-STR-01-A	CONTROLLER	AR
AL-0581	INVERTER	AR
AL-0581	INVERTER	AR
AL-0581	INVERTER	AR
AL-0581	INVERTER	AR
AL-0581	INVERTER	AR
AL-0581	INVERTER	NR
AL-0581	INVERTER	AR
AL-0581	INVERTER	AR
AL-0581	INVERTER	AR

AL-0581	INVERTER	AR
AL-0581	INVERTER	AR
AL-0581	INVERTER	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5112	POWER UNIT	AR
AL-5117	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AL-5118	POWER SUPPLY	AR
AR204A-1D	FUEL FLOW INDICATOR	AR
AR209-13	FUEL FLOW INDICATOR	OH
AS20800-6	BRAKE VENT VALVE	OH
AV-74	ANTENNA, DME/TRANSPONDER	NE
AW2837AB01	INDICATOR, AIRSPEED	AR
B01A214128A	VALVE, HP SHUTOFF	AR
B01A214128A	VALVE, HP SHUTOFF	AR
B01A214128A	VALVE, HP SHUTOFF	AR
B01A214128A	VALVE, HP SHUTOFF	AR

B01A214128A	VALVE, HP SHUTOFF	AR
BC60A-1	CENTRIFUGAL FAN	OH
C290D4J/T2	PROP GOVERNOR	AR
C46BM10100-5	MOUNTING	AR
C46BM10100-6	MOUNTING	AR
C664508-0202	CLOCK	AR
D10888-20	LIQUID CONTAINER	AR
D11588-20	LIQUID CONTAINER	OH
D210439	GOVERNOR	AR
D210439	GOVERNOR	AR
D210439	GOVERNOR	AR
D210439	GOVERNOR	AR
D210439	GOVERNOR	AR
D210439	GOVERNOR	AR
D3474-18	ANNUNCIATOR PANEL	RP
D508-5	FLAP FOLLOW UP SWITCH	AR
DG-OC110A	TURBINE SPEED INDICATOR	AR
DG-OC110A	TURBINE SPEED INDICATOR	AR
DG-OC110A	TURBINE SPEED INDICATOR	AR
DG-OC110C	TURBINE SPEED INDICATOR	AR
DG-OC110D	TURBINE SPEED INDICATOR	RP
DL-OC103G	FUEL QUANTITY INDICATOR	AR
EM2062-2	STALL/GEAR WARNING HORN	AR
EM2079-6	MOTOR CONTROLLER	AR
EM414-15	ACTUATOR, COWL FLAP	AR
EM414-31	ACTUATOR, COWL FLAP	AR
EM8000-5	TACH GENERATOR	NE
EM8000-5	TACH GENERATOR	NE
EM8000-5	TACH GENERATOR	NE
EM8000-5	TACH GENERATOR	NE
EM8000-5	TACH GENERATOR	NE
EPCU6300	EXTERNAL POWER CONTROL UNIT	SV
F7-229-2	PRESSURE SWITCH	NE
F7-229-2	PRESSURE SWITCH	NE
F7-232-2	PRESSURE SWITCH	NE
G-4583A	VHF COM CONTROL PANEL	AR
G-6686	CONTROL UNIT, AUDIO	AR
G-6686	CONTROL UNIT, AUDIO	AR
G-6686	CONTROL UNIT, AUDIO	AR
G831-4-5	HYDRAULIC FUSE	AR
G831-4-5	HYDRAULIC FUSE	AR
G831-4-5	HYDRAULIC FUSE	AR

G-9950-11	ROTATING BEACON	OH
GL511-2102-1	TRANSFORMER RECTIFIER UNIT	AR
GL511-2102-1	TRANSFORMER RECTIFIER UNIT	AR
GL511-2102-1	TRANSFORMER RECTIFIER UNIT	AR
H330	INDICATOR N1	AR
H330	INDICATOR N1	AR
H330	INDICATOR N1	AR
H331C	AMPLIFIER	RP
HG1153CA01	AIR DATA MODULE	IN
HM44A-2	PUMP AND MOTOR	AR
HS7830100-3	THRUST REVERSER	RP
HS7830100-4	THRUST REVERSER	RP
K39117-1	VALVE, BARO CONTROL	AR
L213796	SYNC CONTROL	AR
L94K31-252	FILLER VALVE	AR
L94K31-252	FILLER VALVE	AR
LDK150Y1-1	CONTACTOR	IN
M1050-L329-02	STEREO/CHIME/PAGE AUDIO SYSTEM	AR
M5862AR-6B	AXIAL FLOW FAN	OH
M5862AR-6B	AXIAL FLOW FAN	OH
MA10-10-02	MASK, CREW OXYGEN	OH
MA10-10-02	MASK, CREW OXYGEN	AR
MA10-10-02	MASK, CREW OXYGEN	AR
MA10-10-02	MASK, CREW OXYGEN	OH
MA10-10-02	MASK, CREW OXYGEN	OH
MB801-28	CHRONOMETER	AR
MC10-02-115	MASK, CREW OXYGEN	NR
MC10-02-115	MASK, CREW OXYGEN	NR
MC10-14-00	MASK, CREW OXYGEN	AR
MC10-14-151	MASK, CREW OXYGEN	NR
MC10-15-07	MASK, CREW OXYGEN	NR
MD105-1	PNEUMATIC PRESS INDICATOR	AR
MD110-1	VOLT INDICATOR	OH
MD113-1	OXYGEN INDICATOR, OUTLET	AR
MD113-1	OXYGEN INDICATOR, OUTLET	NR
MD114-5	PNEUMATIC PRESS IND	AR
MD124-1	CABIN AIR TEMP	AR
MD129-1	VOLTMETER	AR
MD142-3	VOLT AMMETER	AR
MD40-45-007V	MASK, CREW OXYGEN	NE
MD40-45-007V	MASK, CREW OXYGEN	NE

MD40-45-007V	MASK, CREW OXYGEN	NE
MD40-45-007V	MASK, CREW OXYGEN	NE
MD40-45-007V	MASK, CREW OXYGEN	NE
MD40-45-007V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-008V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD40-45-009V	MASK, CREW OXYGEN	NE
MD95-9	DUAL PROP AMMETER	AR
MD95-9	DUAL PROP AMMETER	AR
MD95-9	DUAL PROP AMMETER	AR
MF20-541	MASK, CREW OXYGEN	NR
MF20-541	MASK, CREW OXYGEN	NR
MF20-541	MASK, CREW OXYGEN	NR
MS24-3906-30- S589-4	HYD PUMP	AR
MSM283-1K	TEMP CONTROLLER	AR
MXP402	STOWAGE BOX, CREW MASK	AR
MXP402	STOWAGE BOX, CREW MASK	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
NYLC9871	ACTUATOR, ELECTRO MECHANICAL	AR
PAS129-163	REDUCING VALVE	AR

PC-350-2A	INVERTER	OH
PC-350-2A	INVERTER	IN
PC900-1A0800PH-7*2	INDICATOR, FUEL FLOW	AR
PC900-1A0800PH-7*2	INDICATOR, FUEL FLOW	AR
PC900-1A0800PH-7*2	INDICATOR, FUEL FLOW	AR
PC900-1A0800PH-7*2	INDICATOR, FUEL FLOW	AR
PC900-3A2000PH1-1	INDICATOR/CONDITIONER	AR
PF231-N1	FUEL QUANTITY INDICATOR	AR
PF534-N3	TANK UNIT	OH
PF535-N1	TANK UNIT	AR
Q18-945.22.28.1.KB	QUARTZ CHRONOGRAPH	AR
RCA22-42	GYRO HORIZON	AR
RCA41B-01	PERCENT TACH	AR
S25-8UM5	PLUNGER TUBE	NE
S25-8UM6	PLUNGER TUBE	NE
S25UM1209	PLUNGER	RP
S67-1575-135	ANTENNA, GPS/WAAS	NE
SEL-OC19BT	INDICATOR, TURBINE TEMP.	RP
SEL-OC19BT	INDICATOR, TURBINE TEMP.	AR
SEL-OC19BT	INDICATOR, TURBINE TEMP.	AR
SEL-OC19BT	INDICATOR, TURBINE TEMP.	AR
SEL-OC19BT	INDICATOR, TURBINE TEMP.	AR
SEL-OC19DH	INDICATOR, TURBINE TEMPERATURE	AR
SEL-OC19DH	INDICATOR, TURBINE TEMPERATURE	OH
SEL-OC19DH	INDICATOR, TURBINE TEMPERATURE	AR
SFC-113	START FLOW CONTROL	AR
SFC-113	START FLOW CONTROL	AR
SFC-113	START FLOW CONTROL	AR
SLZ7003A	VERTICAL SPEED INDICATOR	AR
SLZ7270	AOA TRANSMITTER	AR
SLZ7270	AOA TRANSMITTER	AR
SLZ7270	AOA TRANSMITTER	AR
SLZ7270	AOA TRANSMITTER	AR
SLZ7270	AOA TRANSMITTER	AR
SLZ7278	AOA TRANSMITTER	AR

SLZ7279	TRANSDUCER, AOA	AR
SLZ7306	AOA TRANSMITTER	AR
SLZ7306	AOA TRANSMITTER	AR
SLZ7306	AOA TRANSMITTER	AR
SLZ7306	AOA TRANSMITTER	AR
SLZ7307	AOA TRANSMITTER	AR
SLZ7681	INDICATOR, AOA	AR
SLZ7778-A-001	STALL WARNING COMPUTER	AR
SLZ7886	COMPUTER, STALL WARN	AR
SLZ7886	COMPUTER, STALL WARN	OH
SLZ7886	COMPUTER, STALL WARN	OH
SLZ7905	STALL WARNING COMPUTER	OH
SLZ8060-3	ANGLE OF ATTACK TRANSMITTER	AR
SLZ8060-5	ANGLE OF ATTACK TRANSMITTER	AR
SLZ8060-5	ANGLE OF ATTACK TRANSMITTER	AR
SLZ8060-5	ANGLE OF ATTACK TRANSMITTER	NR
SLZ9164	AOA PROBE	AR
SLZ9280	AOA TRANSMITTER	AR
SLZ9280	AOA TRANSMITTER	OH
SLZ9374A	AOA INDEXER	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9386	TRANSMITTER, ANGLE OF ATTACK	AR
SLZ9453-11	INDICATOR, ANGLE OF ATTACK	RP
SLZ9454-11	ANGLE OF ATTACK	AR
SLZ9680-15	INDICATOR, AOA	RP
SLZ9680-8	INDICATOR, AOA	AR
SLZ9925B	COMPUTER STALL WARN	AR
SLZ9925B	COMPUTER STALL WARN	AR
SLZ9925B	COMPUTER STALL WARN	AR
SLZ9925B	COMPUTER STALL WARN	AR
SLZ9925B-1	COMPUTER, STALL WARNING	AR
SLZ9925B-1	COMPUTER, STALL WARNING	AR
SLZ9925B-1	COMPUTER, STALL WARNING	AR
SLZ9925B-1	COMPUTER, STALL WARNING	AR
SPS-306B-3	STATIC INVERTER	AR

SPS-306B-3	STATIC INVERTER	AR
SPS-306B-3	STATIC INVERTER	AR
SR-2AD	INDICATOR, TORQUE	AR
SR-2AM	INDICATOR, TORQUE	AR
SR-2AM	INDICATOR, TORQUE	AR
SR-2AM	INDICATOR, TORQUE	AR
SR-2AU	INDICATOR, TORQUE	RP
TA1968N4	FLAP FOLLOW UP	AR
VSTS 083550	ACTUATOR, LANDING GEAR	NR
WKA29720-1	VALVE	AR
WKA31393-1	OXYGEN CYLINDER	OH
WKA35964-1	SHUT-OFF VALVE	AR
WL136RNAEA3	RMI	AR
WL1901KID1	FUEL QUANTITY INDICATOR	OH
WL1901KID1	FUEL QUANTITY INDICATOR	AR
WL1901KID1	FUEL QUANTITY INDICATOR	AR
WL1901KID1	FUEL QUANTITY INDICATOR	AR
WL512CUFEA1	ALERTER	OH
WL717RSA3	INDICATOR, N1	AR
WTC2135-1	HYDRAULIC POWER PACK	AR
WTC2215-1	ACTUATOR, DOOR	AR
WTC2215-1	ACTUATOR, DOOR	AR
WTC2216-1	VALVE	AR
WTC2216-1	VALVE	AR
WTC2217-1	VALVE	AR
XA9503C/200	TKS PUMP	AR
XA9511E003-3	TKS PUMP	AR